


Installationsanleitung PRIME-3HE-Sub-Rack
Installation guide PRIME-3U-Sub-Rack
Instructions de montage PRIME-3U-Sub-Rack

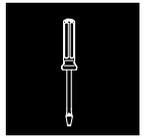

PRIME-3U-Sub-Rack
ETSI-empty







PRIME-3U-Sub-Rack
19"-BM-empty




PRIME-3U-Sub-Rack
19"-FM-empty

A - Montage im PRIME-Gestell / Mounting in PRIME-Cabinet

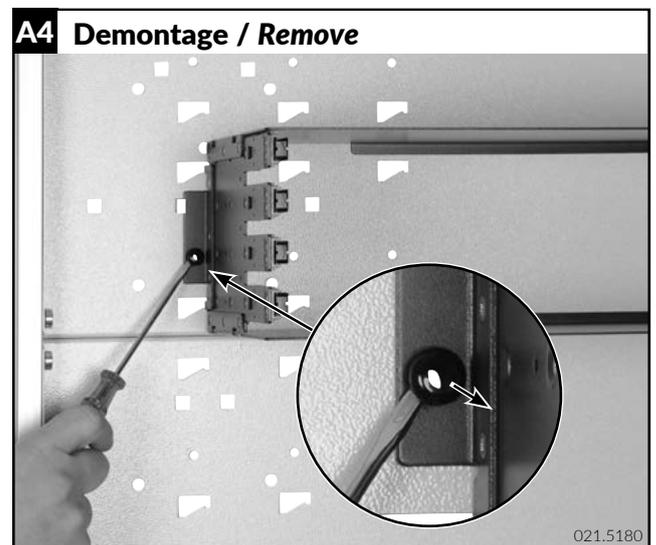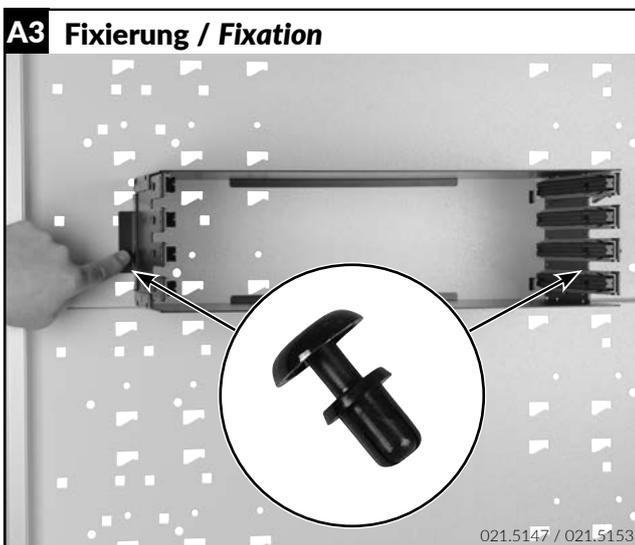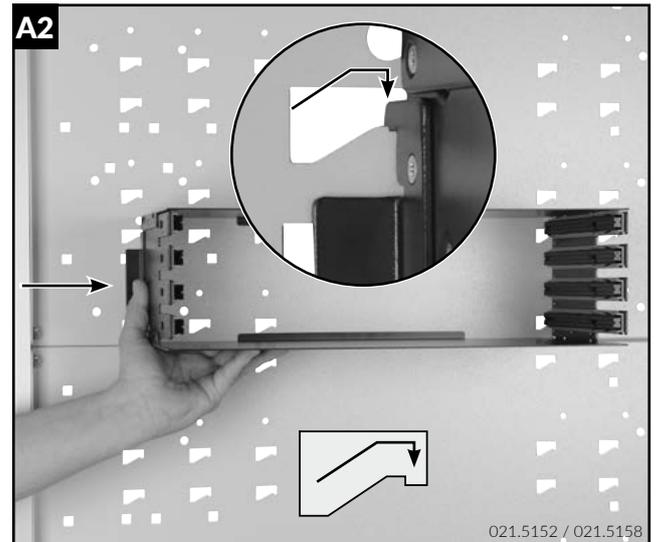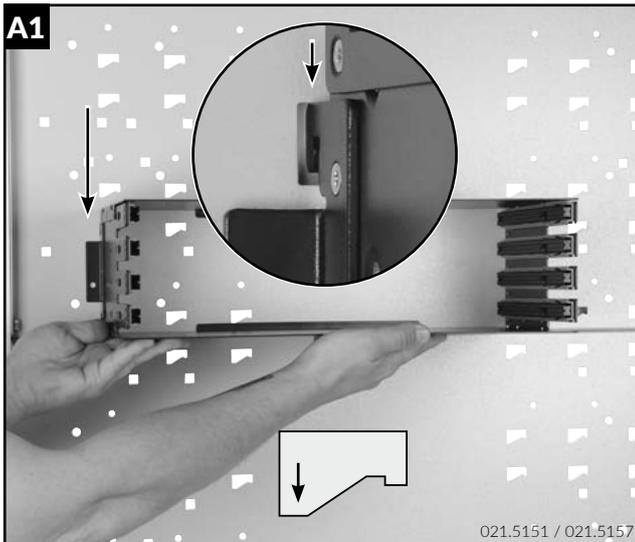


A5 Position im PRIME-Gestell / *Position in PRIME-Cabinet*



Montage links / *Mounting left*

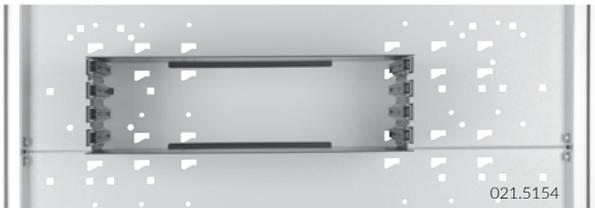





Montage rechts / *Mounting right*

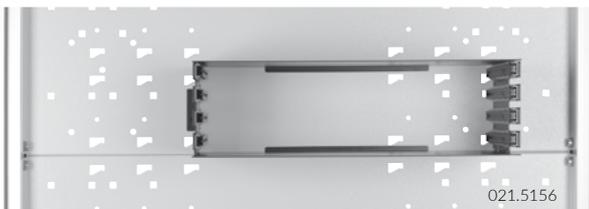


Montage mitte / *Mounting center*

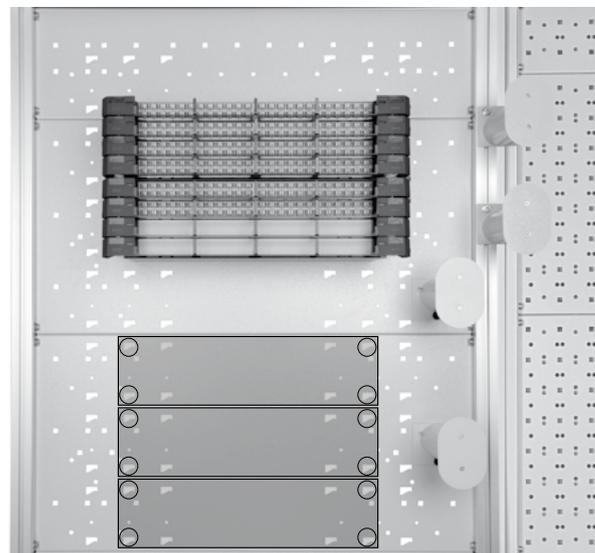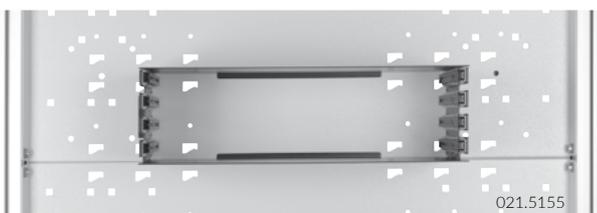



B - Montage im 19" Gestell mit frontseitiger Befestigung / Mounting in 19" Cabinet with front rail fixation

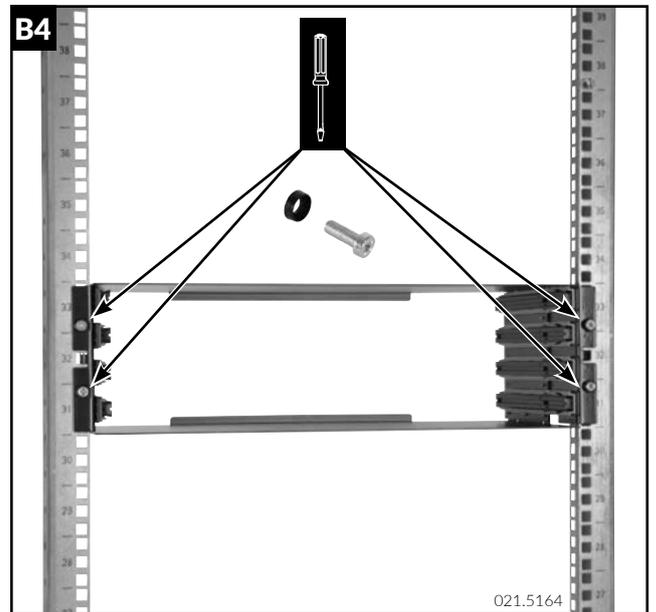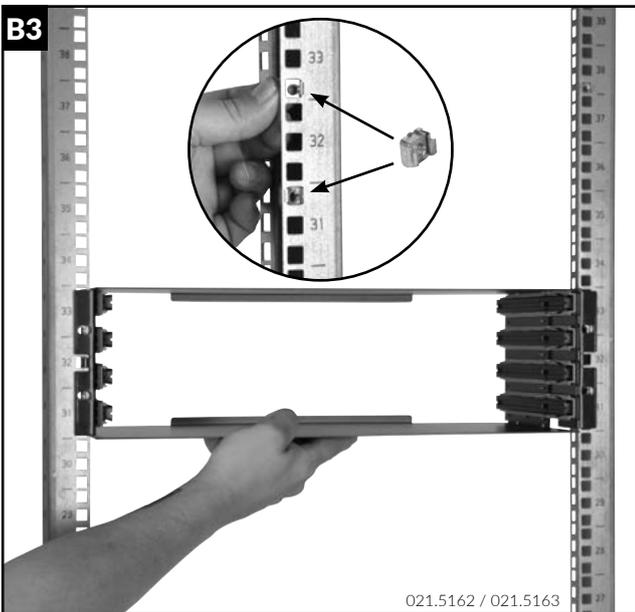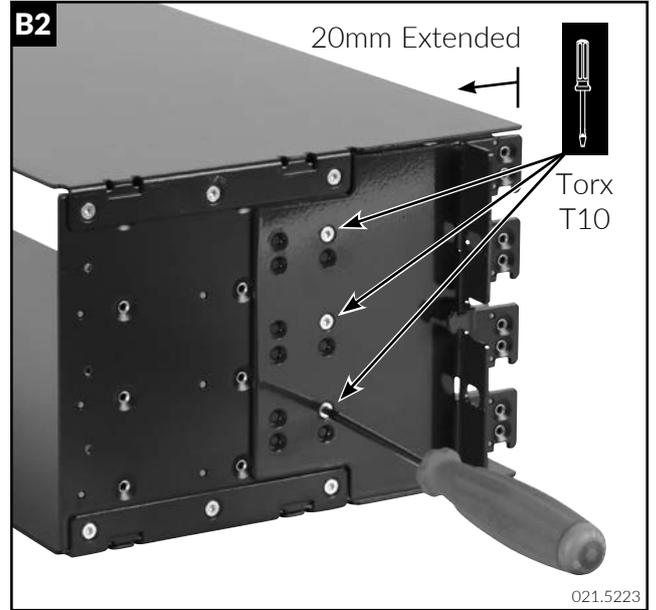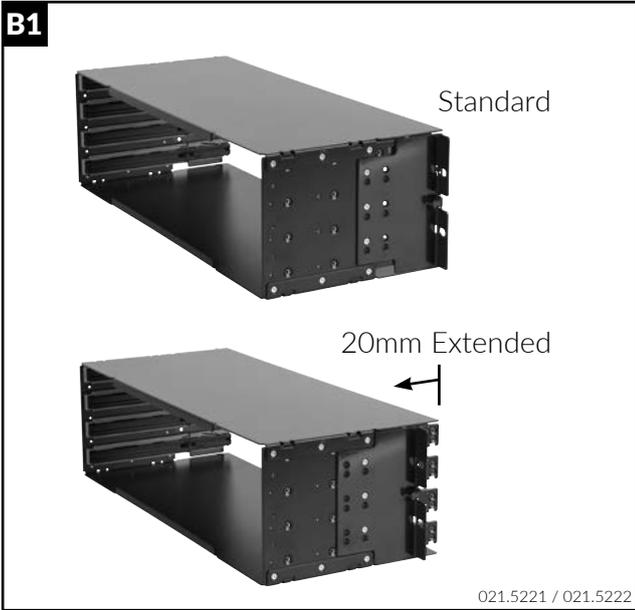

C - Rückseite Deckel (OPTIONAL) / Back cover (OPTIONAL)

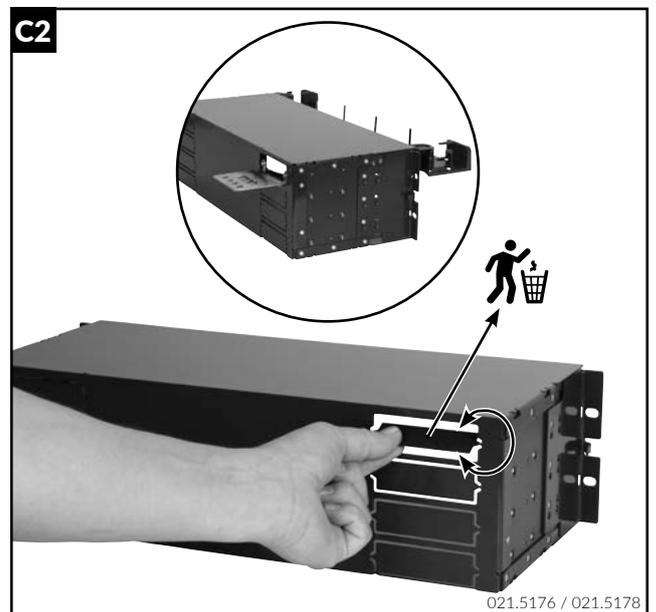

D - Montage im 19" Gestell mit rückseitiger Befestigung / Mounting in 19" Cabinet with back rail fixation

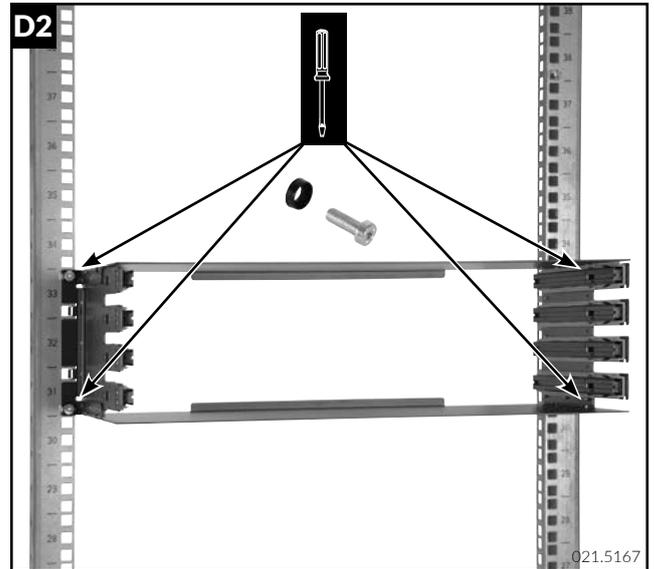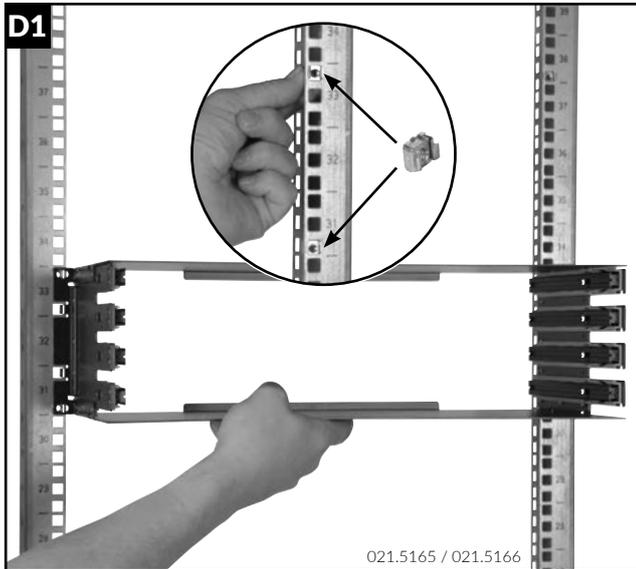

Headquarters

Switzerland

Reichle & De-Massari AG

Binzstrasse 32

CHE-8620 Wetzikon

Telephone HQ +41 (0)44 933 81 11

Telefax HQ +41 (0)44 930 49 41

E-Mail hq@rdm.com

www.rdm.com

R&M

Please note:

This guide shows the best practices for installation **ONLY**. R&M expressly disclaims all liability for any damage to material, equipment, and for any injury or death. Legal health and safety regulations should have priority over best practices as shown in this guide. R&M does not guarantee this guide to be free of errors. Products included may vary from products shown. Please exercise caution.